



Optional Strainer Body Fitting Instructions

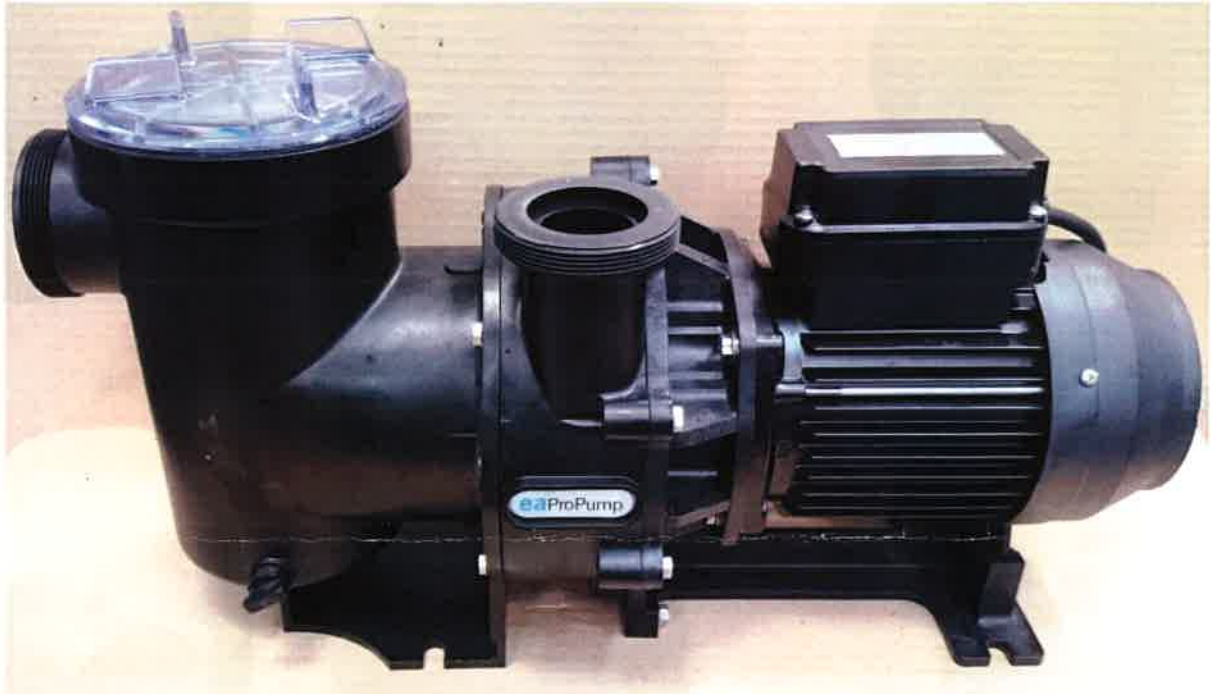

Step 1

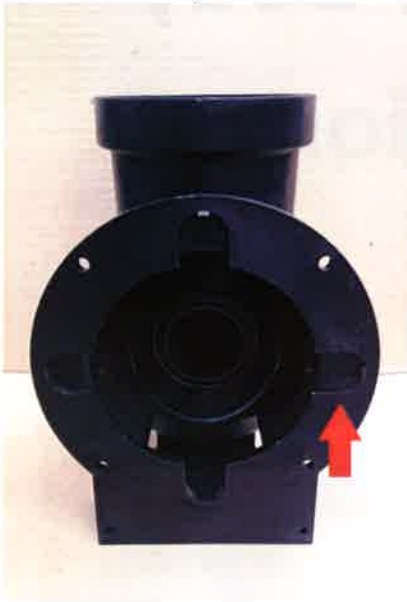

Step 2



Remove drain plug knockout on strainer body.

Place o-ring.

Step 3



Align strainer body to pump. Use supplied M6 bolts and washers to fasten strainer body to pump.

Check for leaks. Ensure drain plugs are tight.